

	1	2	3	4	5	6	7	8	9
+ / On BUTTON				+	+	+	+	+	+
Zero BUTTON									
- / Off BUTTON	-	-	-						

- PUT THE TRANSMITTER IN PROGRAM MODE -


1. First, press and hold the + button. The Red LED will turn on. Next, while continuing to hold the + button, press and hold the - button. Continue to hold both buttons until the LED starts to blink (approximately 5 seconds). Release both buttons while the LED is blinking. The LED will blink two times and then remain on to confirm you are in programming mode. Go to Step 2

**If the LED goes out, start over.*



1a. First, press and hold the - button. The Red LED will turn on. Next, while continuing to hold the - button, press and hold the + button. Continue to hold both buttons until the LED starts to blink (approximately 5 seconds). Release both buttons while the LED is blinking. The LED will blink two times and then remain on to confirm you are in programming mode. Go to Step 2

**If the LED goes out, start over.*



- SELECT THE BUTTON YOU WISH TO USE


2. While the LED is on, press the button you wish to use. (If your block has 8 switches press the + button, if not, press any button you'd like to use). The LED will blink off once and then remain on. Go to Step 3...

- ENTER YOUR 9 DIGIT CODE

3. Enter the 9-digit code from the table pressing the buttons that correspond with the grid above. (If your block has 8 switches use the + button in the 9th position) Go to Step 4...

4. After the 9-digit code is entered, the LED will blink twice to confirm a valid code and remain off.

Repeat the procedure for the remaining buttons.

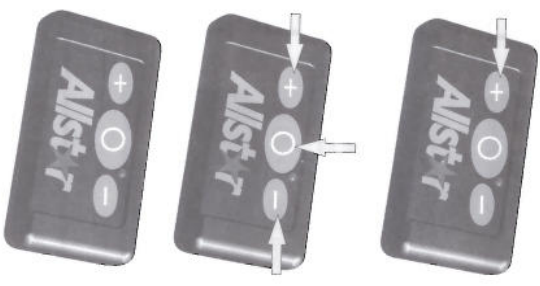

INSTRUCTIONS FOR USE WITH AN ALLSTAR SMART RECEIVER

When using the Allstar Classic with a Smart Receiver there is no need to match a switch setting.

Simply make up your own unique code, enter it in the grid on page 2 and follow the instructions starting with Step 1.

When the transmitter is programmed, follow the instructions for teaching the receiver the transmitter code.

Note: If you want to program all the buttons you can Express Code them by selecting the + button in Step 2 and ending the 9 position code in Step 3 with a +. This will code all three buttons in one programming step.

IMPORTANT
The SAME CODE must be set on both the transmitter and receiver. The controls will not function if the codes are mismatched.

WARNING
Keep transmitters and remote controls out of the reach of children. Do not let children play with or use the transmitter or remote controls. Unexpected door operations can cause personal injury or property damage. Do not place transmitter where the buttons can be accidentally or unintentionally activated.

Installing the Transmitter

The transmitter is supplied with a metal clip which may be used to attach the unit to a sun visor. If the clip is used, slide it into the recess provided on the back of the transmitter case until the snaps on the case fit around the clip. If the transmitter is installed in a pocket in your car, follow all the manufacturer's instructions.



Battery Replacement

The MVP Quick-Code transmitter is provided with two factory installed 3-volt batteries which should be replaced after two years of normal use. The transmitter code is retained in permanent memory and will not be lost during battery replacement. To replace the batteries, remove the back of the case with a small screwdriver. Carefully slip the batteries out of the holders and replace with fresh CR2032 3-volt batteries. The "+" on the batteries must point away from the circuit board. Replace the back of the cover and resume normal use.

Improper transmitter installation or use may cause intermittent operation which can result in unexpected door operations.